

L.T.D. SR Manual

The LTD SR is an extremely clear low gain overdrive here are some tips on using the LTD SR. Controls are Volume, Tone and drive.

Volume is usually 10 o clock for a starter, The Tone usually 12 o clock is a good starter and drive set from 9 o clock to 12 o clock.

Functions

1. Volume adjusts overall level of the LTD SR. This control is very active; settings from very low to quite high are all usable depending on how you have the drive control set.
2. Tone adjusts treble and bass content. This control is unique from other Barber pedals, it cuts bass and adds treble as you turn it up, and cuts treble while adding bass as it is turned down. (it is normal to hear a little DC offset noise while turning this control)
3. Drive adjusts sustain for the LTD SR. Low settings can be used to drive amps hard or to adds some “flavor” to your clean sounds. High settings can get you to vintage cranked amp sounds.
4. Internal trim pots are (orange) bass, and (white) presence. Start with each control at the half way point tune the presence to add “bite” or clarity. Use the bass trim to add body to your sound. Do not use more force than needed to turn these controls.

Additional notes

Please use a 9 volt **negative tip** power supply (not included) when not using a battery (not included).

Questions?

Email us at sales@barberelectronics.com

Or call 717-630-9191

www.barberelectronics.com

Barber Electronics
25 Kenlee Circle
Hanover, PA 17331

Thank you for purchasing the L.T.D.

This manual may be updated in the future.